



FortiGate FSM-064



Installing the FSM Module

The Fortinet Storage Module (FSM) is a 64 Gigabyte solid state disk (SSD) and tray which can be inserted into a FortiGate unit that supports additional SSD components.

To complete this procedure, you need:

- A FortiGate unit with an empty drive bay opening.
- To avoid any electrostatic discharge, install in a static free area or wear an antistatic wrist band.

Fortinet FSM-064 hard disk is not hot swappable. The procedure for inserting the Fortinet FSM-064 module into a FortiGate unit drive bay requires the FortiGate unit to be powered off.

The Fortinet FSM-064 must be protected from static discharge and physical shock. Only handle or work with the Fortinet FSM-064 at a static-free workstation.

To insert a Fortinet FSM-064 into a FortiGate unit

1. Ensure the FortiGate unit is powered off before proceeding.
2. Remove the panel block on the FortiGate unit using the hot swap latch.
3. Insert the Fortinet FSM-064 into the empty slot in the FortiGate unit. Ensure the Fortinet logo is right-side up.
4. Carefully guide the module into the FortiGate unit.
5. Pull out the tray latch on the right-hand side of the module if pushed in.
6. Insert the FSM-064 by applying moderate force to the front faceplate near the upper edge to slide the FSM-064 into the slot. The FSM-064 should glide smoothly into the FortiGate unit. If you encounter any resistance while sliding the FSM-064 in, the FSM-064 could be aligned incorrectly. Pull the FSM-064 back out and try inserting it again.
7. Press the tray latch firmly to lock in the module.
8. Power on the FortiGate unit.

Removing the Fortinet FSM-064

Should you need to remove the Fortinet FSM-064, shut down the FortiGate unit using proper shut down procedures.

To remove the Fortinet FSM-064

1. Ensure the FortiGate unit is powered off before proceeding.
2. To avoid any electrostatic discharge (ESD) when handling Fortinet FSM-064, install in a static free area.
3. Pull the tray latch on the right-hand side of the module to the extended position to unlock the drive from the FortiGate unit.
4. Gently pull the tray latch to remove the module.

